

# MV Series 운전 Manual

2013. 12.


M&V(Motor and Valve)

## 목 차


I . Power on Display	-----	3
II . Position Setting	-----	4
1) Full Close Setting		
2) Full Open Setting		
III . Soft Setting	-----	6
1) Resme to Active Mode		
2) Actuator Direction Setting		
3) User Password Setting		
4) Default Setting		
IV . Factory Setting	-----	9
1) Model Select		
2) Full Close Keep		
3) Full Open Keep		
4) Position Keep		
5) Operation Type		
6) Reduce Speed		
7) Error Time Set		
8) User Password View		
V . Remote Mode	-----	18
1) In Calibration Mode		
2) Out Calibration Mode		

## I. POWER ON DISPLAY

1. 최초 전원(220V 단상 50~60Hz)을 인가하면 다음과 같은 화면을 표시한다.

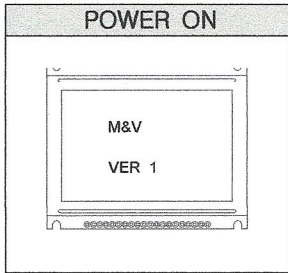

2. 회사명, 버전을 2초동안 표시 한 후 READY 모드를 표시한다.

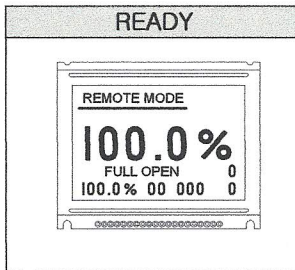

화면 밝기 조절

LATCH 모드에서

OPEN PUSH SWITCH - 밝아진다.

CLOSE PUSH SWITCH - 어두워진다.

